

## LOCKWASHER INSTRUCTION

1. Install the enclosed external toothed lockwasher under one of the nuts securing the panel to ensure bonding between the panel and enclosure

## HUB INSTALLATION INSTRUCTION

1. Use only approved watertight, rigid conduit hubs that are designed to fit into standard conduit openings.
2. Conduit entry can be made in the top or bottom end or through the side walls of this enclosure.
3. Use a hole saw or greenlee-type punch to cut the required holes. (see the table below for the hole size and flat surface area required)

Trade Size of Conduit	Recommended Diameter of Opening	Recommended Minimum Diameter of Flat Surface
1/2	7/8	1 3/16
3/4	1 3/32	1 1/2
1	1 23/64	1 7/8
1 1/4	1 23/32	2 3/8
1 1/2	1 31/32	2 5/8
2	2 15/32	3 1/4
2 1/2	3	3 3/4
3	3 41/64	4 7/16
3 1/2	4 5/32	4 15/16
4	4 11/16	5 7/16
5	5 25/32	6 3/8
6	6 29/32	8

4. Install the hub according to the hub manufacturer's instructions.