



PT12LFB
WT12LFB

LIGHT FIXTURE BOX

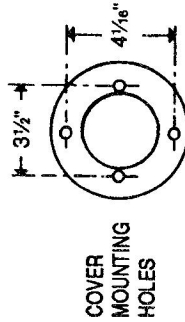

INSTALLATION INSTRUCTIONS

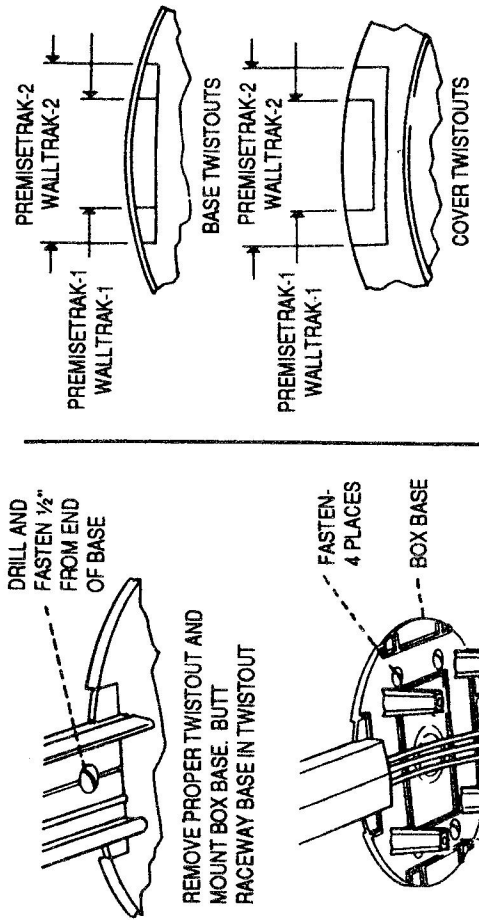

Remove proper cover twistout to allow cover mounting holes to align with base studs. Select pair of opposite holes (and studs) to be used to mount fixture, and use remaining pair to fasten cover. Two 8-32 machine screws are provided for mounting the box cover.

Do not use these screws to mount the fixture.

CAUTION: Do not mount ceiling fan to fixture box or cover. Fan must be suspended directly from ceiling joists. Remove large, rectangular K.O. from box base for access to ceiling.

Fixtures weighing more than 10 lbs. must be supported by the building structure.



KELLEMS DIVISION
HUBBELL INCORPORATED
14 Lord's Hill Road
P.O. Box 901
Stonington, CT 06378-0901
Tel. 203-535-5350

PT12LFB
WT12LFB

LIGHT FIXTURE BOX



INSTALLATION INSTRUCTIONS

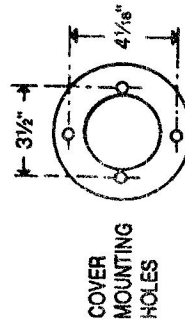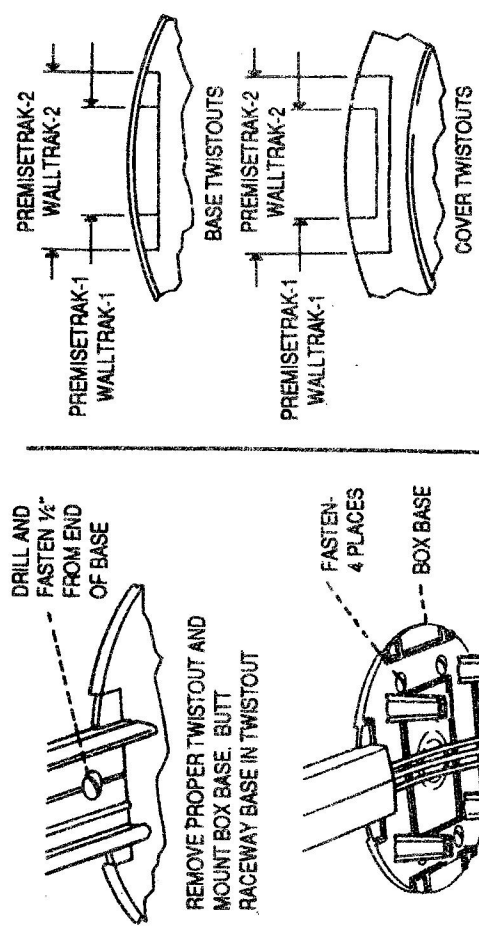

Remove proper cover twistout to allow cover mounting holes to align with base studs. Select pair of opposite holes (and studs) to be used to mount fixture, and use remaining pair to fasten cover. Two 8-32 machine screws are provided for mounting the box cover.


Do not use these screws to mount the fixture.

CAUTION: Do not mount ceiling fan to fixture box or cover. Fan must be suspended directly from ceiling joists. Remove large, rectangular K.O. from box base for access to ceiling.


Fixtures weighing more than 10 lbs. must be supported by the building structure.

KELLEMS DIVISION
HUBBELL INCORPORATED
14 Lord's Hill Road
P.O. Box 901
Stonington, CT 06378-0901
Tel. 203-535-5350

To remove knockouts, typical . . .

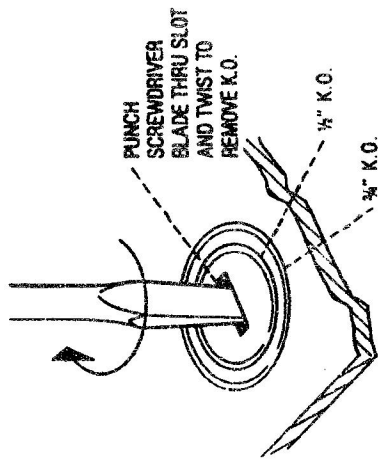


To remove twistouts, typical . . .

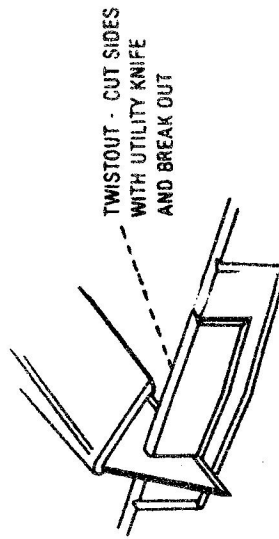


DE-BURR EDGES IF NECESSARY AFTER REMOVING KNOCKOUTS OR TWISTOUTS

To remove knockouts, typical . . .

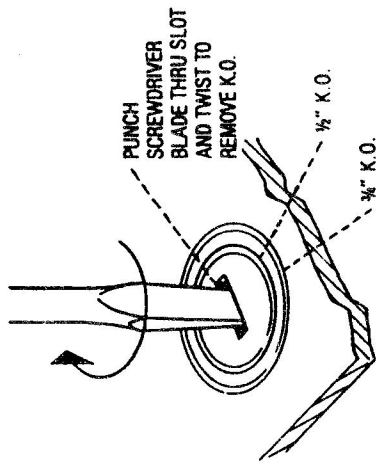

To remove twistouts, typical . . .

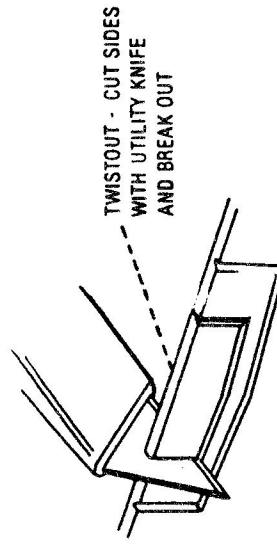

DE-BURR EDGES IF NECESSARY AFTER REMOVING KNOCKOUTS OR TWISTOUTS