


Installation Instruction for  
Large Grounding Kit  
99411400

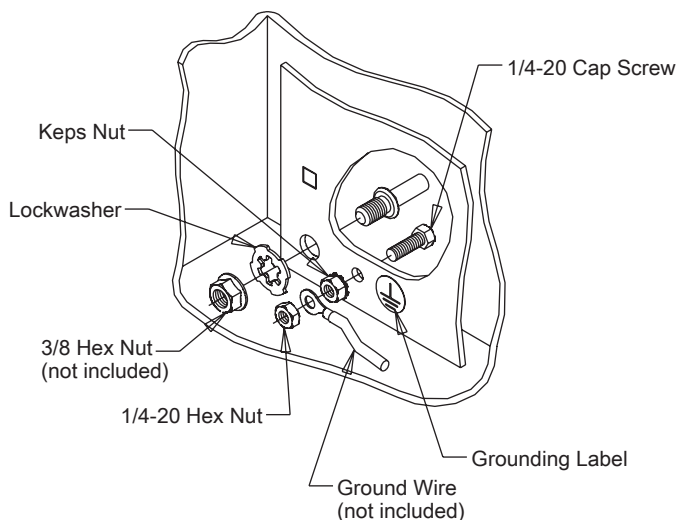

1. Insert the 1/4-20x7/8 bolt through the hole in the panel as shown.
2. Secure bolt with keps nut. The keps nut must penetrate into the paint to ensure electrical continuity.
3. Attach the ground wire and secure with 1/4-20 hex nut as shown.
4. Install the lockwasher under one of the nuts securing the panel to ensure grounding between the panel and the enclosure. Recommended torque for grounding washer not to exceed 190 in-lbs.
5. Attach included grounding label adjacent to the bolt as shown.



1. Secure 1/4-20 hex nut to weld stud.
2. Attach the ground wire and secure with keps nut as shown.
3. Attach included grounding label adjacent to the weld studs as shown.

